



ID NO	PART NO.	DESCRIPTION	QTY PER D
1	8824	BEARING COLLAR SHAFT	1
2	8823	BEARING SHAFT	2
3	8824	END LANTERN	2
4	8823	SEAL SHAFT	2
5	8814	SOFT END PLATE	20
6	8821/8822	PLATE FRONT/BACK	1 EA
7	8810	FITTING O-RING	4
8	8800	SCREWS PLATE	8-16
9	8801	PLATE REAR/DRIVE SHAFT (OPTIONAL)	1
10	881555A	SHAFT, STAINLESS STEEL DRIVE	1
11	8802	GEAR DRIVE	1
12	881388A	SHAFT, STAINLESS STEEL BEAR	1
13	8801	BEAR, IRON	1
14	8803	CASE, CENTER CAST IRON	1
15	8821K	KEY, BEAR ONLY	2

